




HP Slate 8 Pro Front Facing Camera Replacement

A guide to show the procedure for the replacement of the front facing camera.

Written By: Andrew Hall

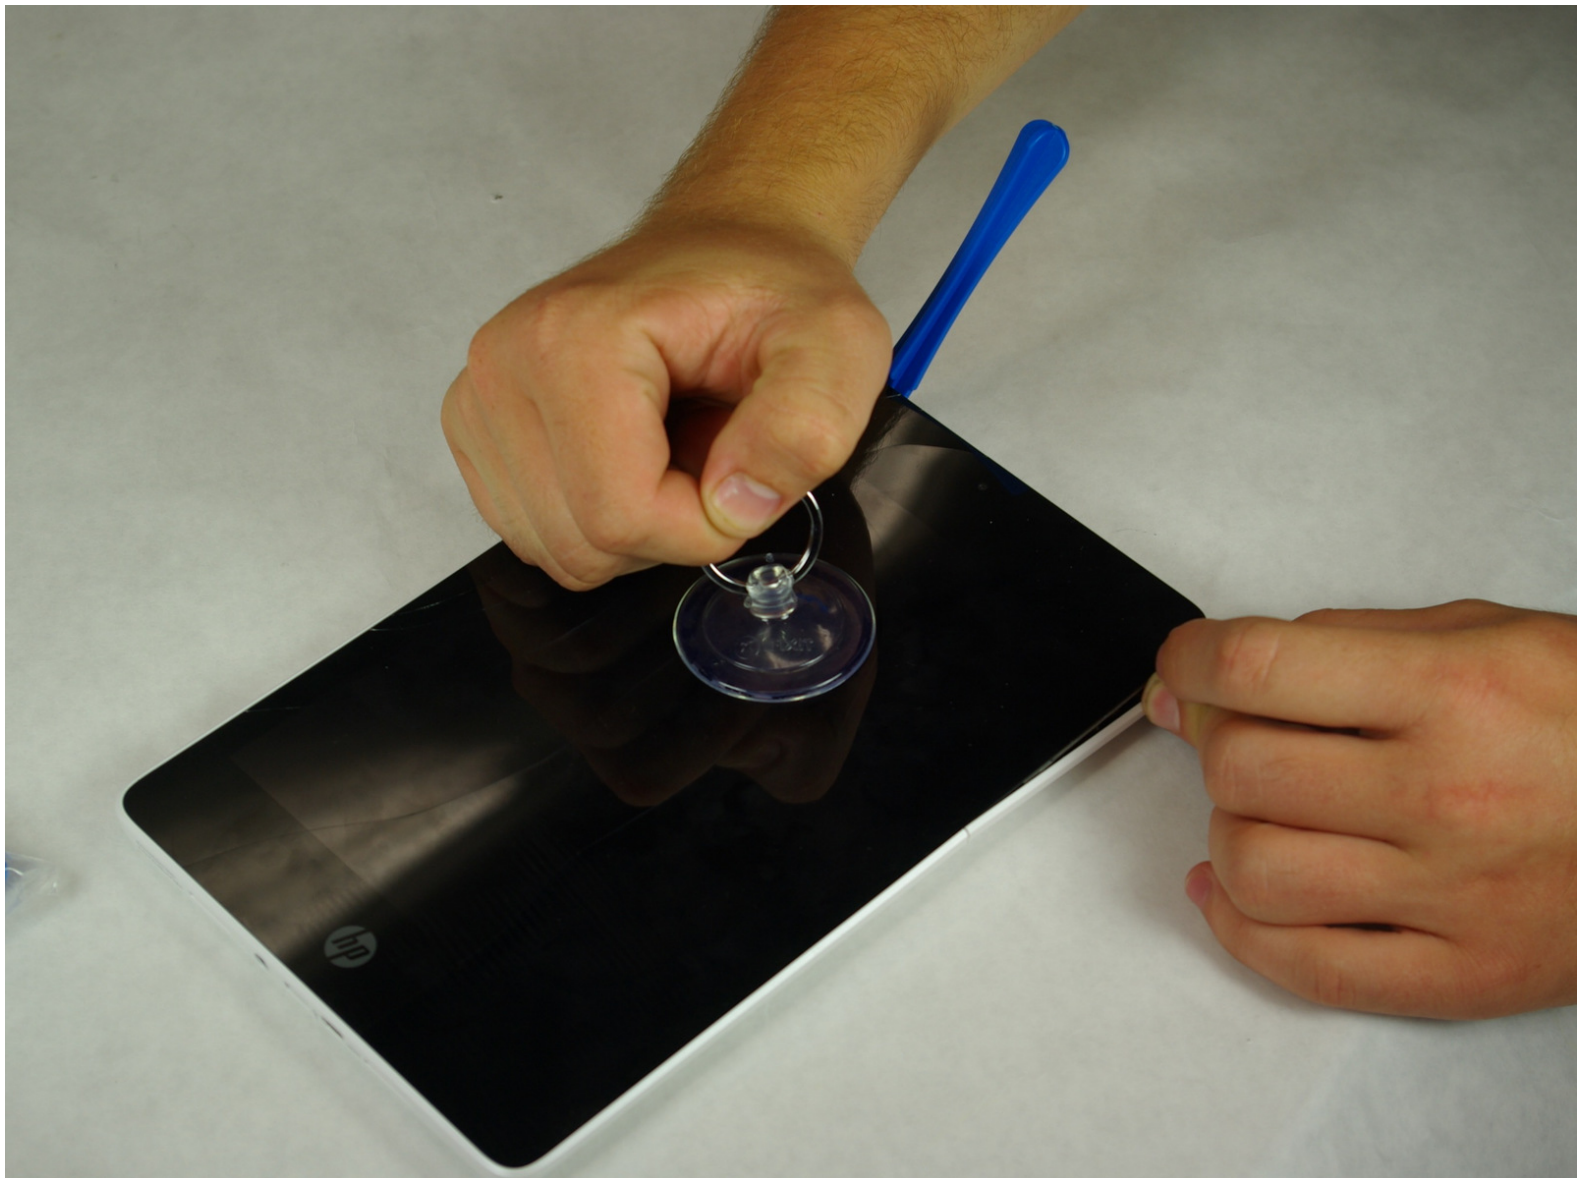

INTRODUCTION



This guide will show you how to pry open the screen and replace the front-facing camera.



TOOLS:


- [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
 - [Suction Handle](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Front Facing Camera

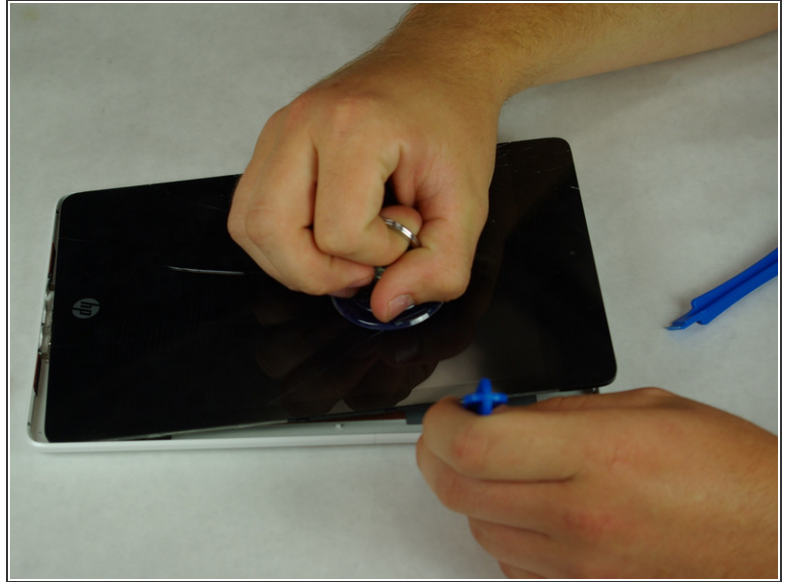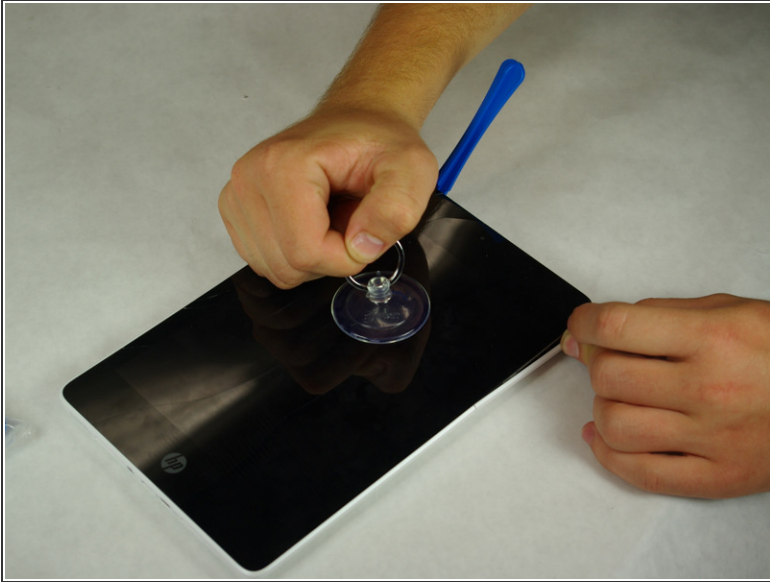


- Secure the suction cup to the center of the screen.
- Using a plastic opening tool, pry along the edges of the display while pulling upwards with the suction cup.

Step 2

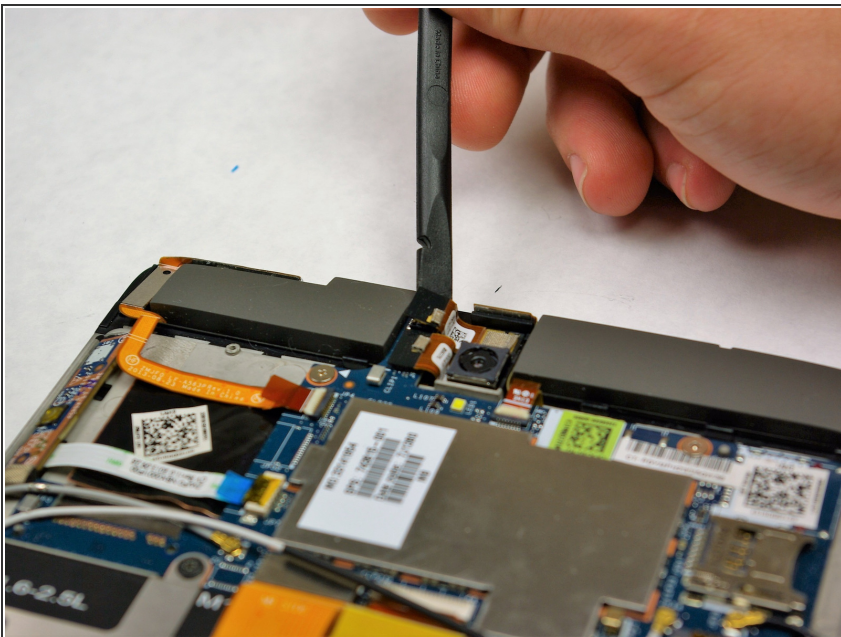

- Use the Spudger to disconnect the ribbon cable to the upper camera by prying the connector away from the board.

Step 3

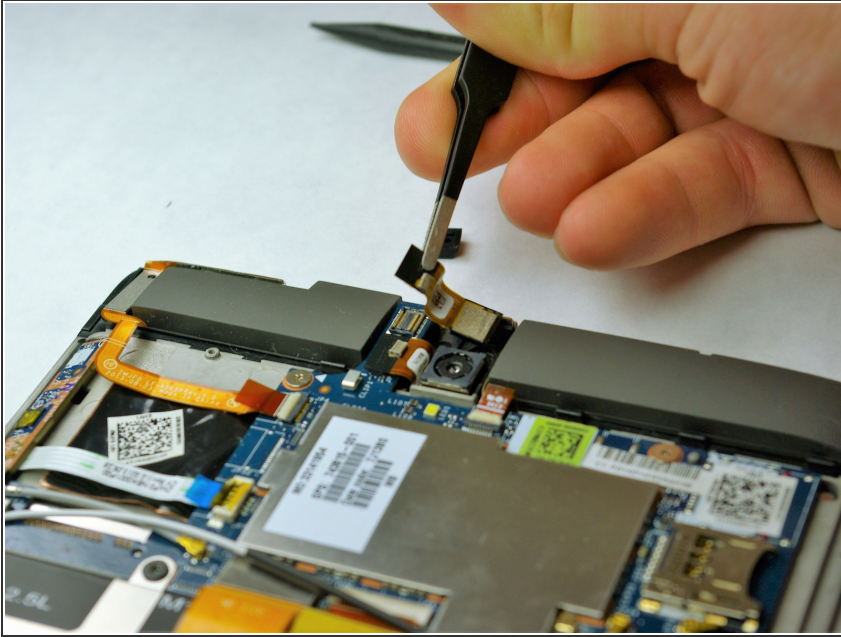

- Use ESD safe tweezers to pry the camera away from the motherboard starting at the side opposite the ribbon cable.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 03:43:03 AM.